



1、 Turn the handle off and remove the foot pad

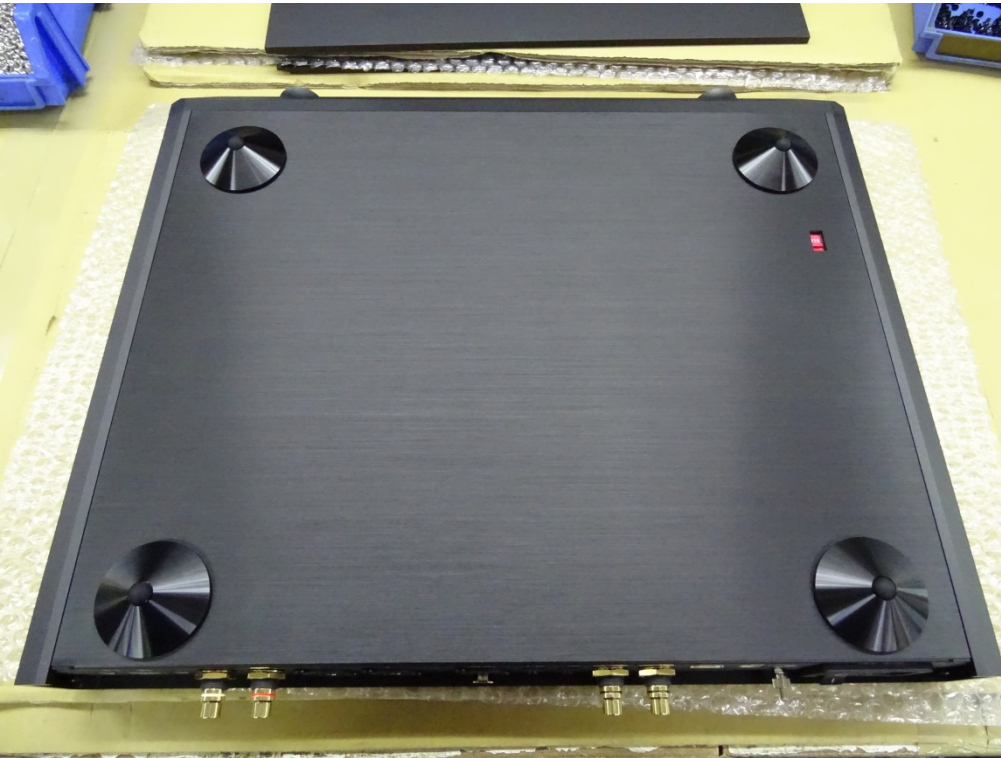

2、 Remove the foot pad holder

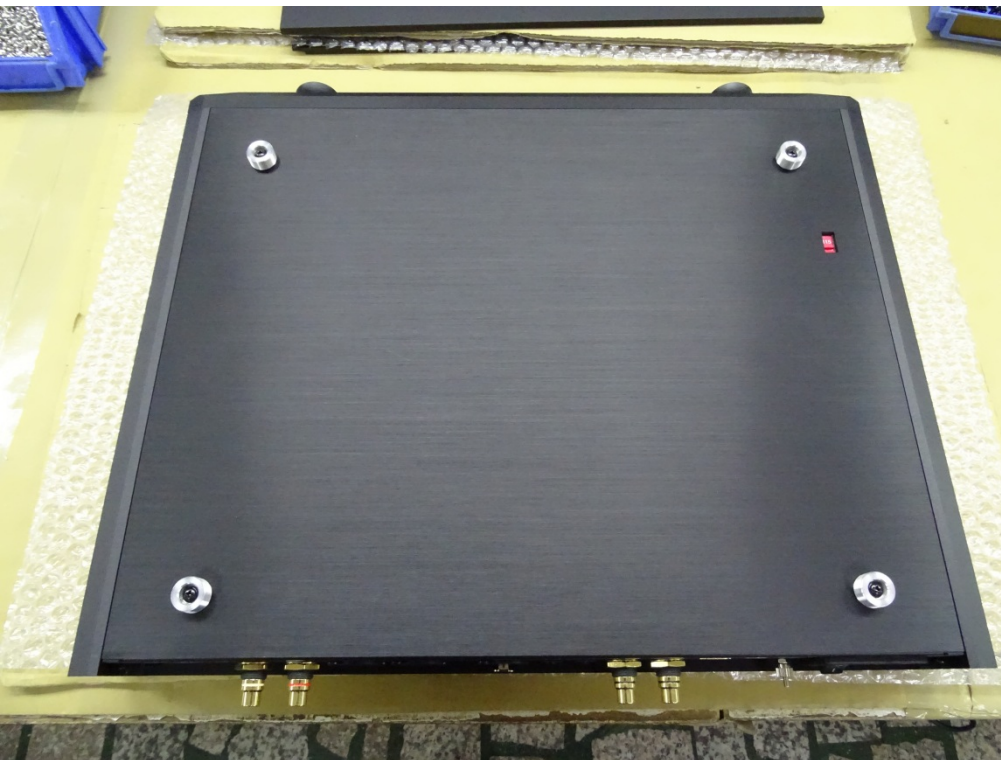

Remove the screws in the red frame for a total of 6 pieces to remove the EVO DAC cover.

